





ABWMK-KIT Installation Instructions

To mount a Wireless Receiver on the side of the Battery, use just the Side Plate.

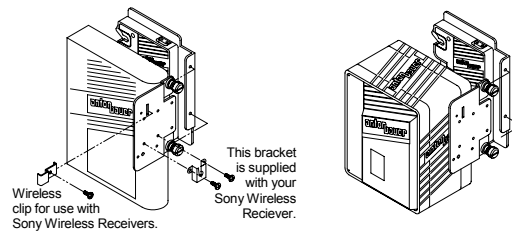

To mount a Wireless Receiver behind the Battery, use both Plates and adjust them for a proper fit.

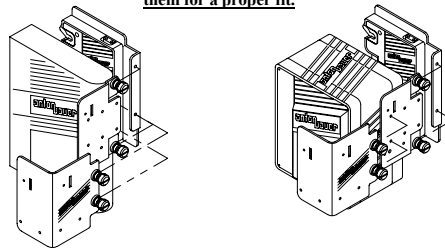


Available Separately

WRB-185 and WRB-200 For Lectrosonics Style Receivers

- Attaches directly to any Anton/Bauer Wireless Receiver Plate.
- Able to "Piggy-Back" multiple Compartments.

WRB-185: Fits CR-175, CR-185, CR-187 and UCR-190 style Receivers

WRB-200: Fits UCR-195, UCR-195D, UCR-200D, UCR-205D, and UCR-210D style Receivers

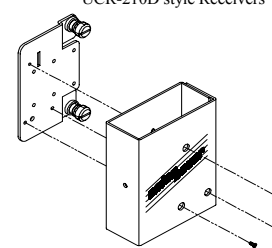

World Headquarters 14 Progress Drive, Shelton, CT U.S.A.

Tel (203) 929-1100

support@antonbauer.com

Europe Eurode Business Center, 6461KB Kerkrade, The Netherlands

Tel +31 45-563-9220

eurosupport@antonbauer.com

www.antonbauer.com

7595-0106 Rev E