



1. Remove and discard these two(2) Screws.

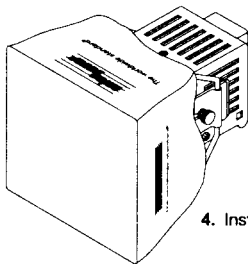

4. Install the supplied Hood.

2. Install the supplied Pan Head Screw and Lock Washer.

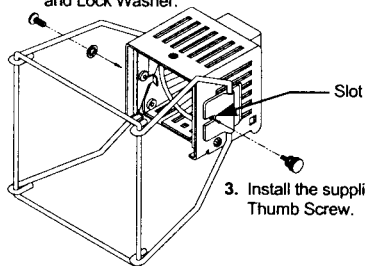

3. Install the supplied Thumb Screw.